


REVISIONS

REV.	DESCRIPTION	DATE	APPRVD.

Notes:

1. Deactivate recirculation operation with remote controller. See pg. 13 of the owners guide.
2. This unit produces acidic condensate during operation and must be drained and disposed according to local code. Use pipe material that will not corrode such as pvc or cpvc. Do not use materials such as black steel, iron, or other metals. Slope horizontal pipe downwards 1/4" per foot towards drain or condensate pump. Do not submerge or block end of drain pipe.

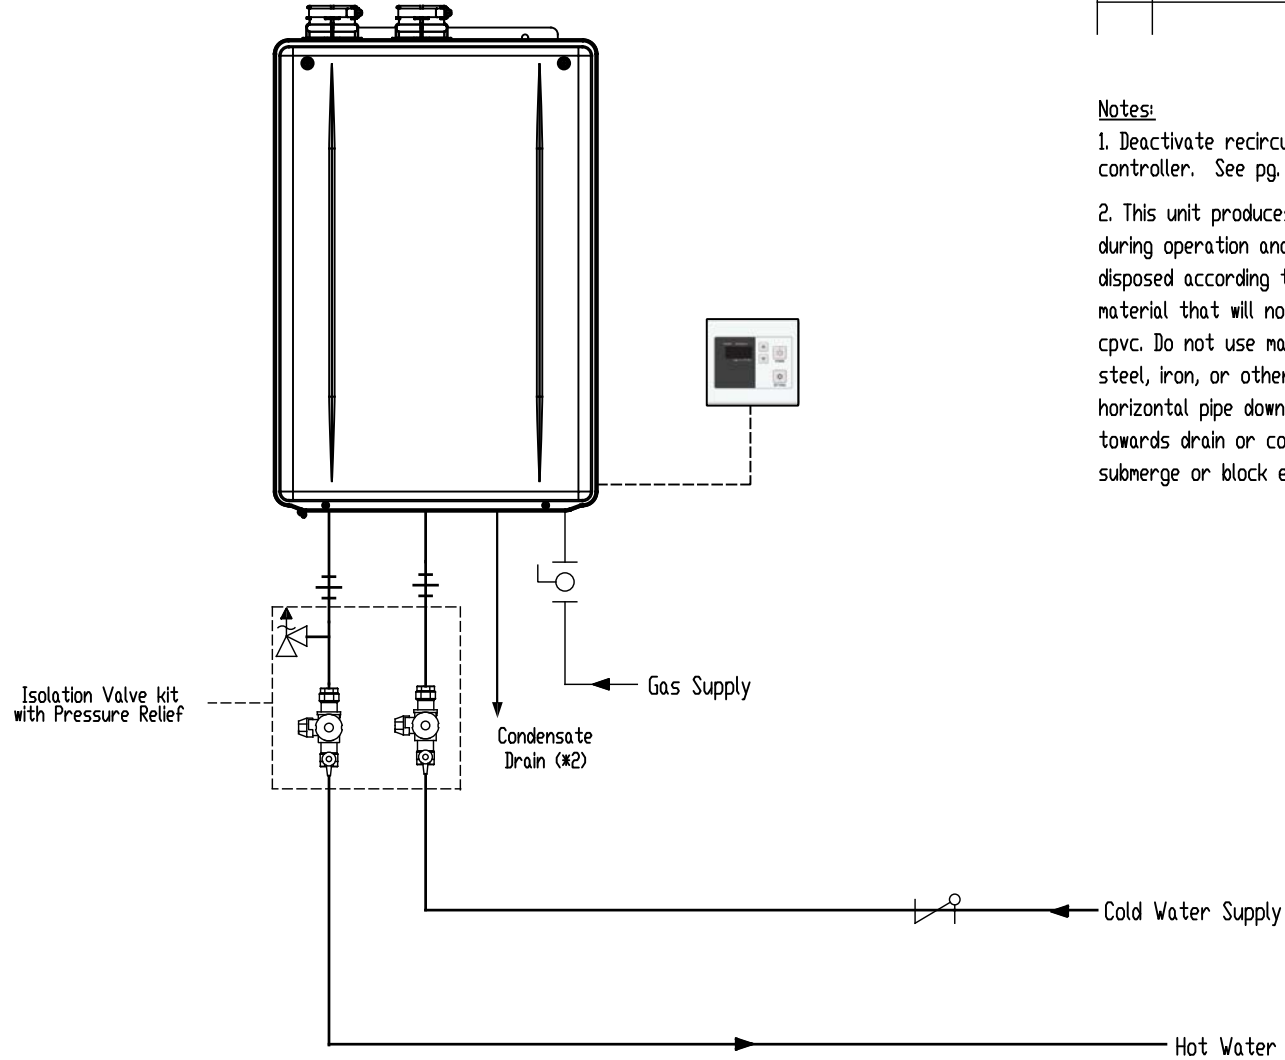

NORITZ
 11160 Grace Avenue
 Fountain Valley, California 92708
 866-7NORITZ (866-766-7489)
 www.noritz.com

MODEL: Residential Condensing-NRCR
 APPLICATION: Domestic Hot Water Only. Deactivated Recirc.
 DRAWING NUMBER: NRCR-DHW
 DRAWING DATE: Feb 2020

Noritz Accessories

Isolation Valve Kit with Pressure Relief (# IK-WV-200-1-TH/LF)

Residential Neutralizer (# NC-1S)

Note: This diagram is for reference only. Installation must comply with State and Local Code, all gas and water pipe must be sized correctly to specific length, according to accepted engineering methods or the UPC Code for Noritz Water Heaters to operate correctly.

- | | | | |
|--|------------------------------------------------------------------|--|----------------------------------------------|
| | Shut-off Ball Valve | | Aquastat (Honeywell Model #L6006A or L6006C) |
| | Check Valve | | Pump |
| | Union | | Mixing Valve |
| | Pressure Relief Valve (Watts 174A, Zurn P3000BR, Cash Acme F-82) | | Thermal Expansion Tank |